

SUNDOWN

**In order to use the hydraulic opening system,
you need to assemble the bracket.**



SUNDOWN

Bolt the aluminium flange, put the pendulum and after that tighten.



SUNDOWN

Put the lever of the opening adjustment.



Fix the pto shaft protection cover by three self-threading screws.




SUNDOWN

**Put four bolts into the gear box's holes.
Attention! The longer two bolts must be inserted towards the pendulum.**



SUNDOWN

Put the gear box on the frame and fix it without tightening bolts and nuts.

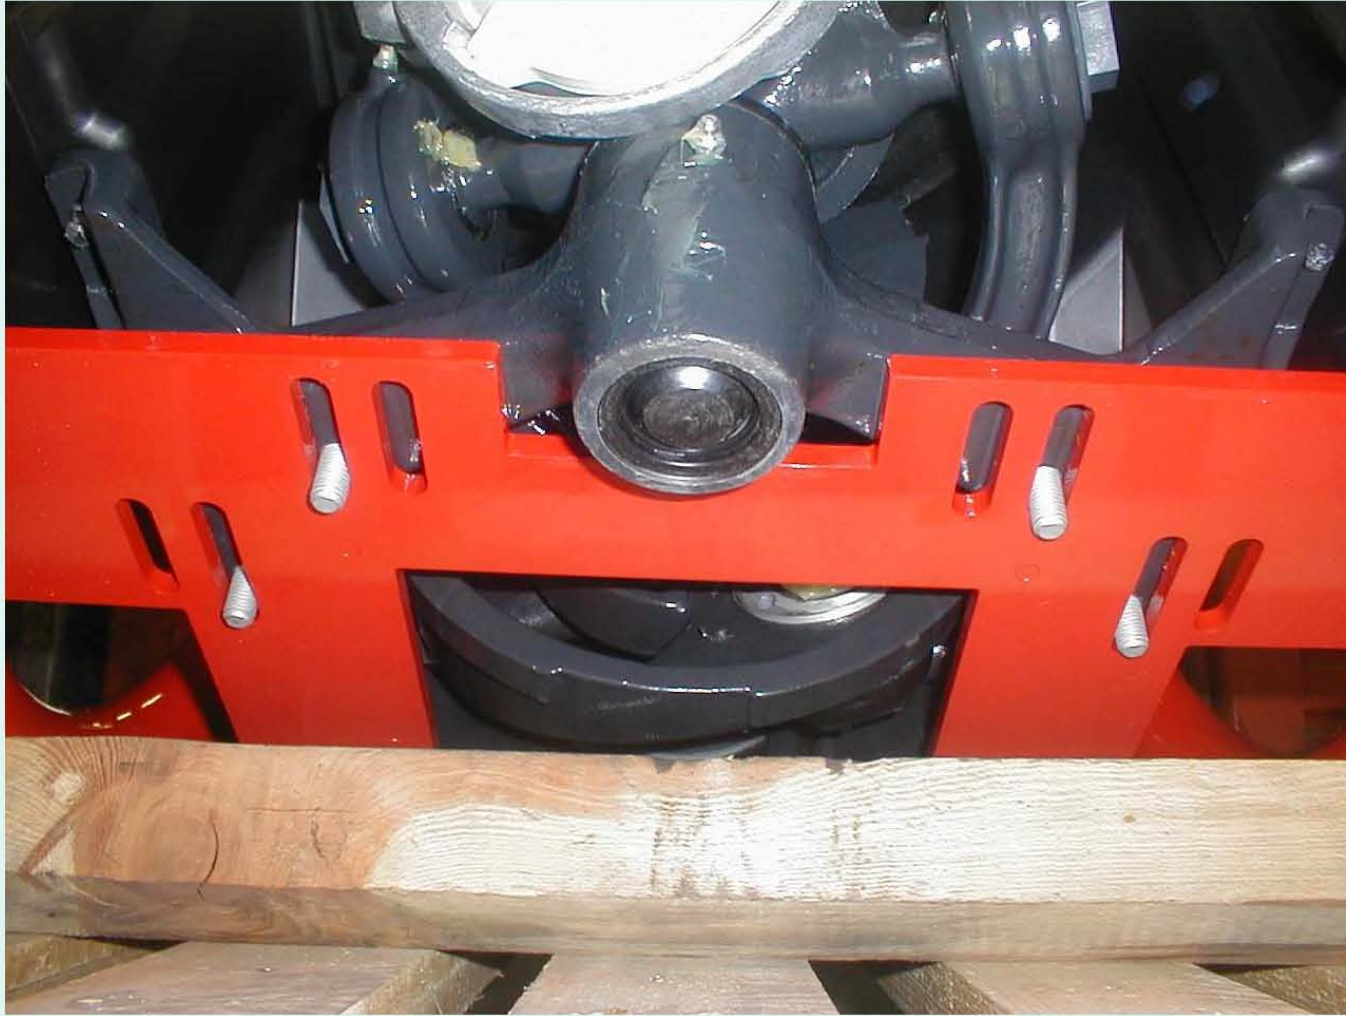

SUNDOWN

Put the rectangular tube for hopper support and its rods.




Attention! The bend part of the rod must be turned towards the top.

SUNDOWN

Put the hopper and fix it by four screws.



Tighten definitely the gear box's bolts and nuts.

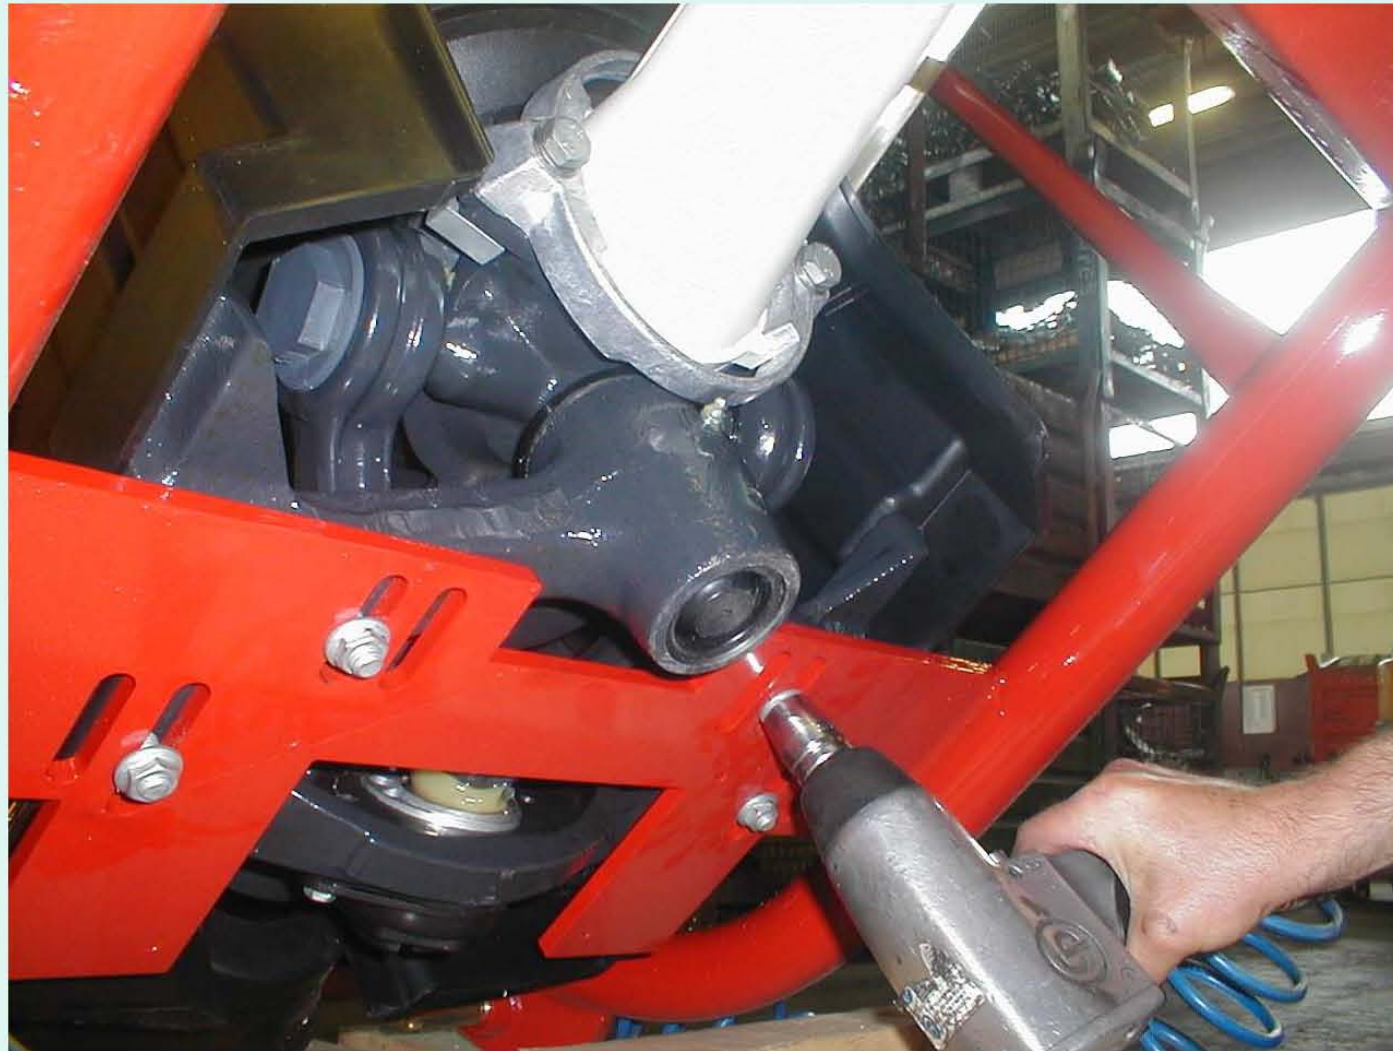


SUNDOWN

Put the handle with its extension and spring.




SUNDOWN

Bolt the handle with the lever for the opening adjustment together.

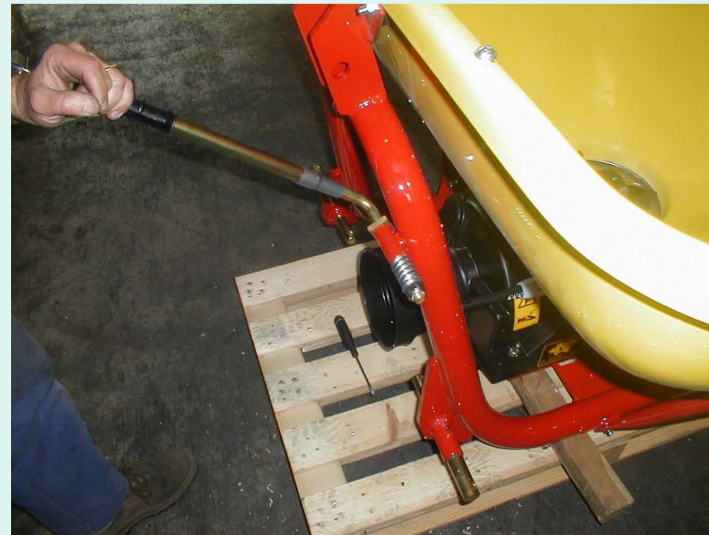

SUNDOWN

Set up the hydraulic cylinder.

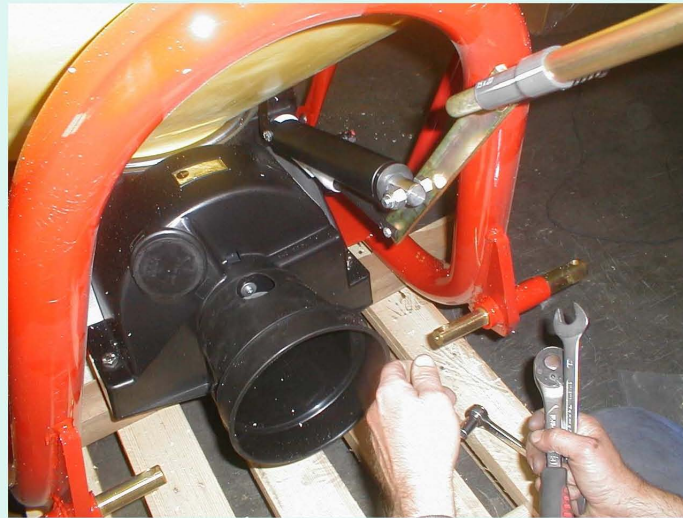

The end.